

User Manual

First Use

Set a Master Code

The first time you switch on your PIN-Master you must select your own Master Code (4-8 digits).

When selecting your Master Code, please consider:

- You have to enter your Master Code every time you switch on your PIN-Master.
- Your Master Code cannot be changed, unless you perform a reset where all data will be erased.

To set the Master Code

1. Press the On/Off button to turn on the PIN-Master.
2. Create your Master Code by typing it on the Number pad. The Master Code consists of 4 to 8 digits.
3. The display only shows "XXXX" for security reasons.
4. Press the Enter button.
5. Enter your Master Code again on the Number pad.
6. Press the Enter button to confirm your Master Code.

Your Master Code is now set.

Use

Store PIN codes and passwords

1. Press the On/Off button to turn on the PIN-Master.
2. Enter your Master Code on the Number pad.
3. Press the Enter button to access the PIN-Master.
4. Press the New button to create a new code.
5. Enter the name for the code on the Number pad.
6. Press the Enter button to confirm the name.
7. Enter the code on the Number pad.
8. Press the Enter button to save the code.

Your code is now saved in the PIN-Master. Codes will be stored alphabetically.

Access stored PIN codes and passwords

1. Press the On/Off button to turn on the PIN-Master.
2. Enter your Master Code on the Number pad.
3. Press the Enter button to access the PIN-Master.

The codes can be found by using the Arrow buttons or by entering the first letter of the code on the Number pad.

Edit stored PIN codes and passwords

1. Press the On/Off button to turn on the PIN-Master.
2. Enter your Master Code on the Number pad.
3. Press the Enter button to access the PIN-Master.
4. Use the Arrow buttons to access the code you want to edit.
5. Press the Edit button to edit the selected code.
6. Change the code name with the Number pad.
7. Press the Enter button to confirm the name.
8. Change the code with the Number pad.
9. Press the Enter button to save the code.

Erase stored PIN codes and passwords

1. Press the On/Off button to turn on the PIN-Master.
2. Enter your Master Code on the Number pad.
3. Press the Enter button to access the PIN-Master.
4. Use the Arrow buttons to access the code you want to erase.
5. Press the Erase button.
6. The display will show "Reconfirm Erase". Press the Erase button again.

The code is now erased from the PIN-Master.

Change the Master Code

The Master Code cannot be changed without resetting the PIN-Master.

To reset the PIN-Master:

1. Press the On/Off button to turn on the PIN-Master.
2. Enter a wrong Master Code four times.
3. There is a deliberate gap and a warning between the second and third attempt to prevent unintended resets of the PIN-Master. The PIN-Master will be in Security Mode before all codes are erased.

The PIN-Master is now reset. For security reasons all stored codes are erased.

Battery

Replace the CR2016 battery when the display shows a low battery warning.

Remove the battery from the battery compartment at the bottom of the PIN-Master.

Stored codes will not be erased when the battery is replaced

Tips

You should feel a small click when typing.

Watch the display as you type.

Do not type too fast.

Use abbreviations.

Button description

On/Off (red button): Switching the PIN-Master® on and off

Use the Number pad for numbers, letters and symbols.

Use the Shift button to switch between numbers, letters (CAPITAL/lower cases) and symbols.

Arrows: Use the Arrow buttons to navigate through the codes.

Enter button: Normal enter function.

Backspace. Move cursor one field backward.

New button: Is used to create a new data entry, which afterwards is stored in the memory

Edit button: Is used for editing stored data

Erase button: Is used for erasing (deleting) stored data entries

1 button: Symbols + - * _ @ . , ; : () [] { } | 1

2 button: A B C 2

3 button: D E F 3

4 button: G H I 4

5 button: J K L 5

6 button: M N O 6

7 button: P Q R S 7

8 button: T U V 8

9 button: W X Y Z 9

0 button: Symbols # ? & = % ! \$ / \ < > " ' ^ ` ~ 0

User manual

The user manual can also be found on the back of your PIN-Master®